

INSTALLATION of BOS-X

Contains BOS, DupSoft, BridgeTab; and a range of other programs

CURRENT VERSIONS

Pack	Date	BOS	Dup	Deal	BSC	H.R.	BT Adm	BT	BS fw	BS dll
10.33	2022-11-10	10.05	10.10	1.0.1.14	3.0.111	1.17	1.48	1.85	136	4.2.0.7

Use with

BOS-X is only compatible with the Prim versions of BridgeSorter and Duplimate MkV. Do NOT install this version if you have a BridgeSorter with a number below 570, or a Duplimate Mk V with a number in the range 1700-1849, unless the machine has been upgraded to Prim standard. Duplimates with number up to 1699 can use this version.

DOWNLOAD AND INSTALLATION

[Start download now](#) and then let it be completed before you start the installation.

1. Locate the downloaded BOS.zip
2. Unzip it
3. Open the BOS package folder
4. Right-click the setup.exe to install as Administrator
5. Leave the defaults as is and accept all installations
6. Make sure that you clear all security questions. PTO

Note that you must prevent that Windows searches for updates. PTO

Manual and quick start instruction

BridgeSorter video: <https://youtu.be/Ma2ujqifBgo>

Duplimate video: https://youtu.be/L_zmlff-884

[Manual](#) shortcut will be put on the Desktop during installation.

FIRST START

Start the DEMO event. DupSoft will be unlocked when you duplicate a (1) deal with a dealing machine (BridgeSorter, Duplimate, HandyDup) or connect as a licensed BridgeTab user.

You can try all functions in the Demo event, except creating new deals, without a dealing machine.

Contact support@bridgesorter.com or support@duplimate.com for details.

Please turn over (PTO)

BRIDGESORTER or DUPLIMATE 1700-1999

Memory integrity has to be switched off. Windows will otherwise block the camera. You need not worry too much about the warning that your computer is vulnerable unless you access shady web sites, in which case you should have it on.

🔒 Device security

Security that comes built into your device.

🛡️ Core isolation

Core isolation helps keep your device safe by protecting the Windows kernel.
Memory integrity is off. Your device may be vulnerable.

Camera drivers

You should also disregard Windows' information on the Logitech Webcam camera and also Windows offers to search for drivers. There are no drivers for the Logitech camera that is compatible with Windows integrity. You will need a new machine, or at least a new camera, if you for some reason must have the Memory integrity switched on permanently.

Incompatible drivers

Resolving incompatibilities with these drivers will enable you to turn on Memory integrity.

[Learn how to resolve problems with incompatible drivers](#)

Logitech Webcam C160 Properties

General Device Information Driver Details Events

Logitech Webcam C160

Events

Timestamp	Description
1/6/2025 4:41:51 PM	Device install requested
1/6/2025 4:41:51 PM	Driver service added (LVUVC64)

Information

Device USB\VID_046D&PID_0824&MI_00\7&3c198ef&1&0000 requires further installation.

View All Events...

- lvbflt64.sys
Logitech
- lvpopf64.sys
Logitech
- lvrs64.sys
Logitech
- lvls64.sys
Logitech
- lvuvc64.sys
Logitech
- lvpopf64.sys
Logitech Inc.
- lvrs64.sys
Logitech Inc.
- lvuvc64.sys
Logitech Inc.