
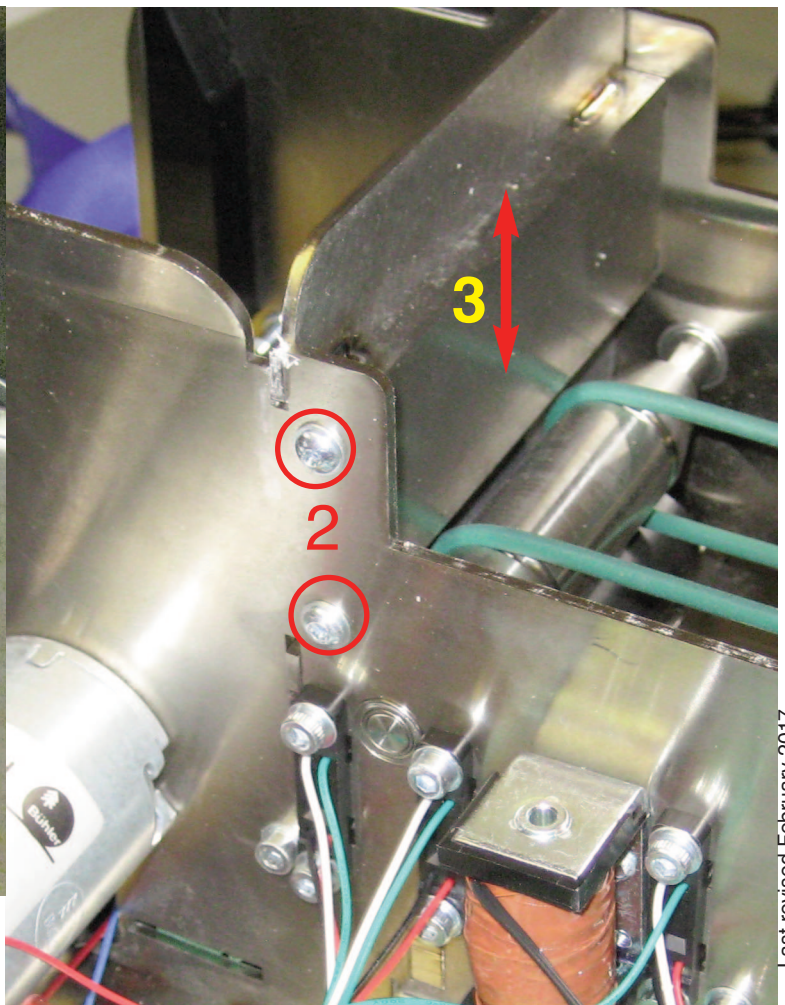


ADJUSTING THE CARD MOUTH

1. Remove the cover, c.f. <http://www.bridgesorter.com/pdf/Removing%20the%20cover.pdf> and/or first part of <https://www.youtube.com/watch?v=q6pZpsHO4F8&feature=youtu.be>
2. Untighten (not remove, just untighten) the four screws (2) holding the wall separating the hopper from the card path, encircled in the illustration below. **Tool:** 2 mm allen key.

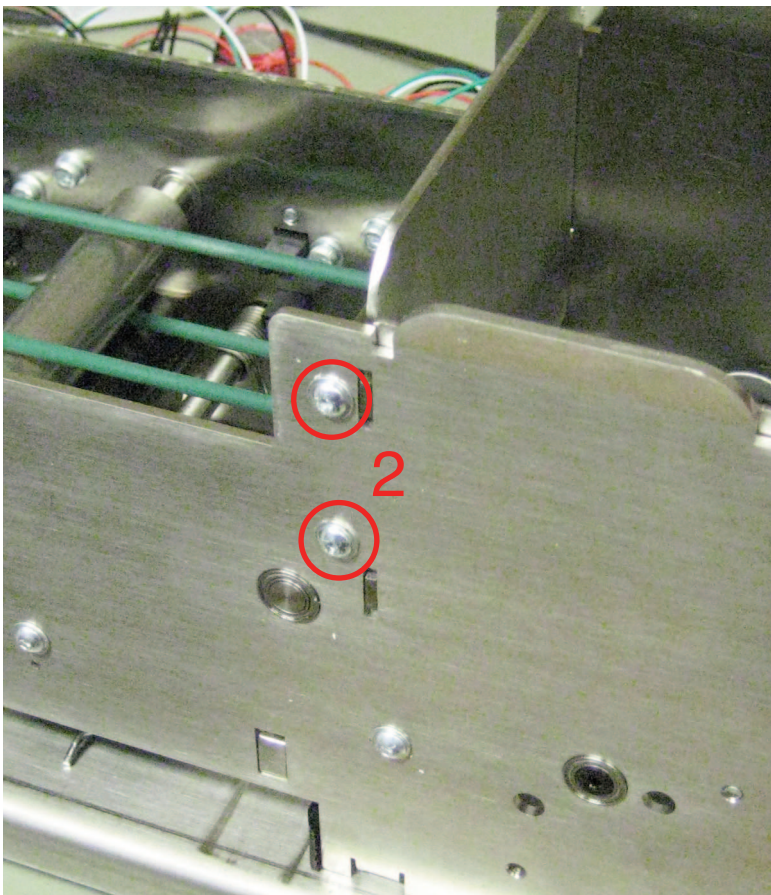

3. Adjust the card mouth by changing the position of the wall (3) BY HAND to 0.42 mm*
4. Tighten the screws (2) holding the wall
5. Mount the cover

*Do NOT use any tools to bend the gap!
Best is to press a 0,42

mm gauge meter and press the wall downwards as shown in the illustration while you tighten the screws holding the wall.

You can use a card + a standard copy paper if you would not have a gauge meter at hand. Put one layer of copy paper folded once on the top of the lower part of the card mouth (encircled in the illustration). Insert a card on top of the folded paper and tighten the screws when the card sits tightly.

Then put one layer of paper on the lower part and check that a card can pass easily over the paper through the gap. Finally insert a card a bit and check that a second card (on top of the first) cannot enter into the card mouth.

