


Motor

There is no maintenance and the motors are very reliable. There are two precautions, however:

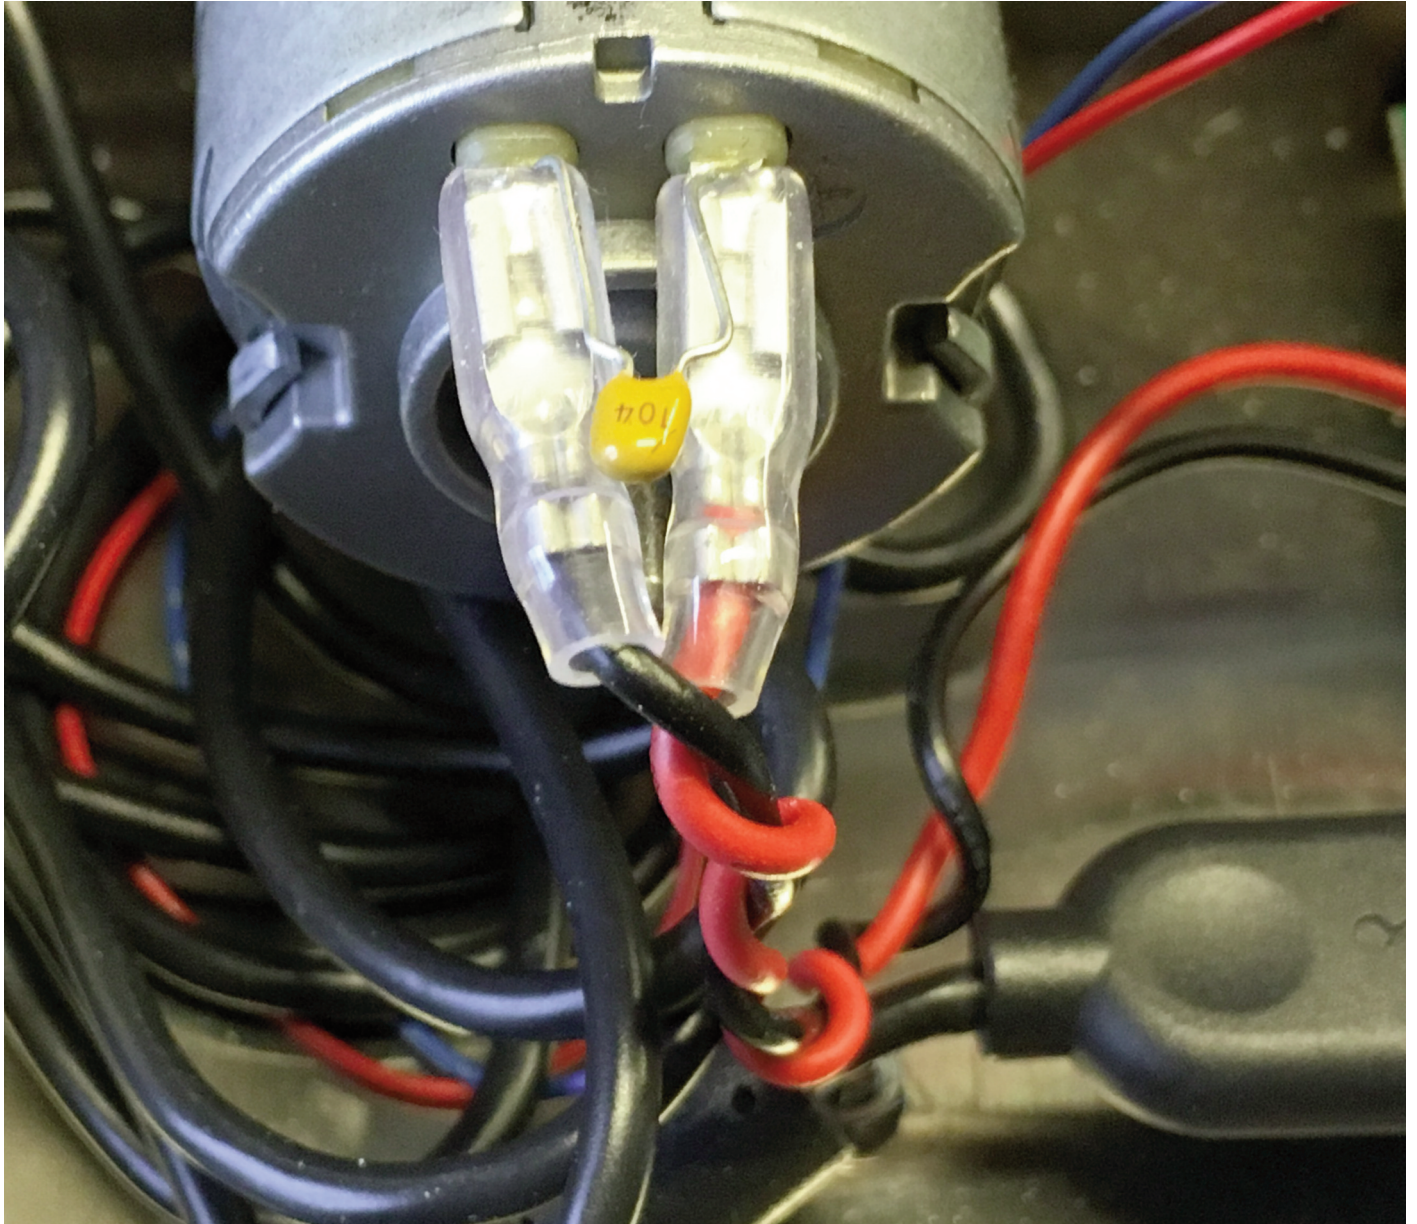

The two (red and black respectively) power cables should be twinned as shown above and there should also be a resistance between the two poles. Be careful to keep the resistance flat over the contacts as shown above. The motor will go in spin if you connect the resistance with earth (i.e. if you let it come in contact with the motor).