

## Read this before upgrade

### **”DON’T FIX IT IF IT AIN’T BROKEN”**

You can stay with the current version so long as you are happy with it. But you need to act when you are not content.

It is crucial that you install the right software version in the right way when you decide to upgrade. The choice depends on what you have got today.

### **DUPLIMATE Mk4.x**

You can download/install the BOS-X version if you have a Mk4.x (black) machine.

### **BRIDGESORTER MkII - III & DUPLIMATE MkV**

Download/install the BOS 8 version if you have BridgeSorter or Duplimate Mk V other than Prim version, c.f. the next headline below.

**Note** that the firmware needs to be upgraded to v. 85 to avoid problems and that you have to follow the upgrade document to dot.

### **BRIDGESORTER & DUPLIMATE PRIM VERSION**

The Prim version is for BridgeSorters from no. 570 and Duplimates with no. 1850 or higher. Use the latest build for those units.

**Note** that the firmware also needs to be upgraded to avoid problems. See the version specification for the corresponding firmware and follow the upgrade document to dot.

### **WHAT VERSION DO WE USE?**

The version that you run today is displayed in DupSoft’s About dialog.

### **Automatic update check**

The Check for updates function that you find in BOS/System checks and starts upgrade of the BOS pack automatically, but you have to perform the upgrade of the machine’s firmware manually.

Last revised April 2018